



*** Note: Eave & Canopy Eave flashing are only provided when soffits are ordered**

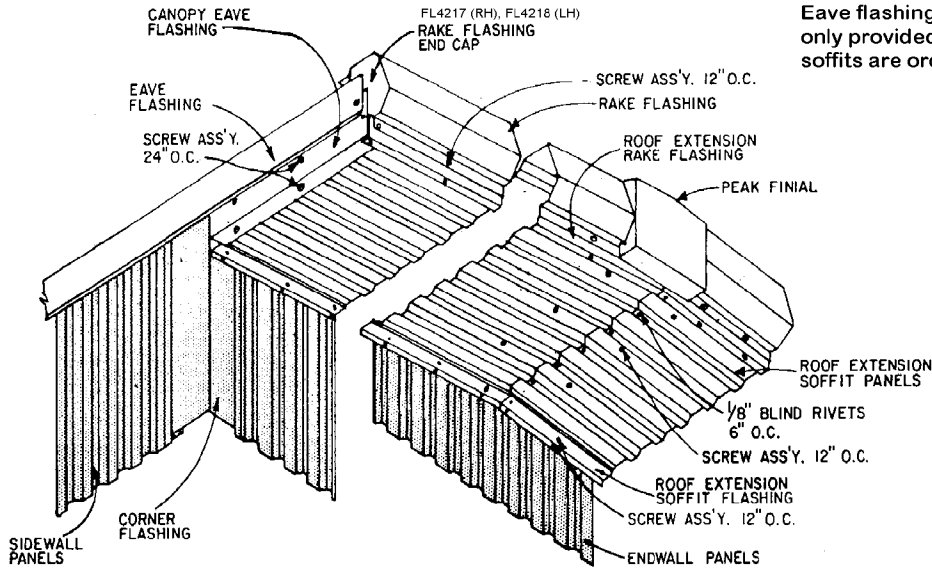


CORNER WITH ROOF EXTENSION

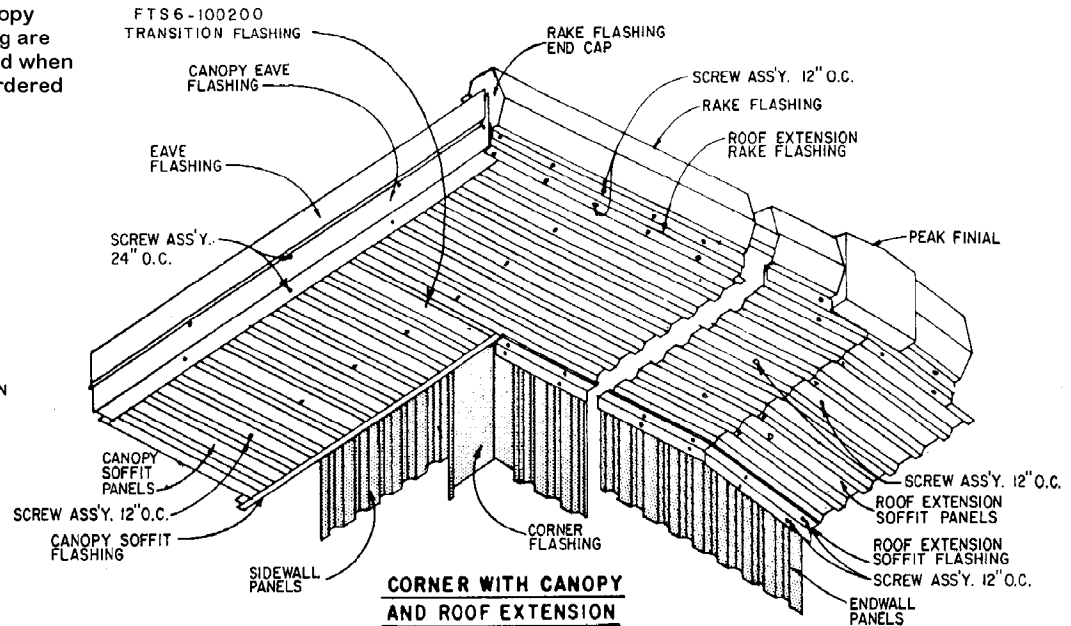


CORNER WITH CANOPY AND ROOF EXTENSION


NOTE: SOFFIT SIDELAPS USE HW5511 @ 18" O.C.

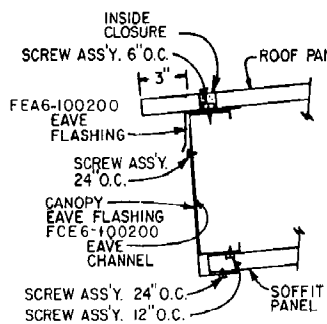


EAVE W/O GUTTER

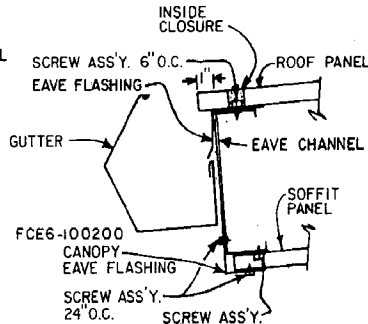


EAVE W/ GUTTER

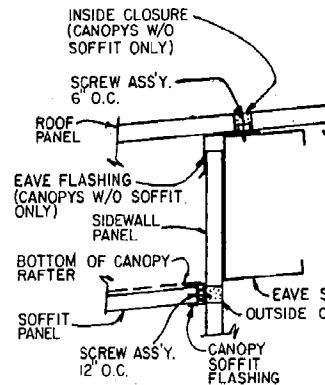


CANOPY AT SIDEWALL

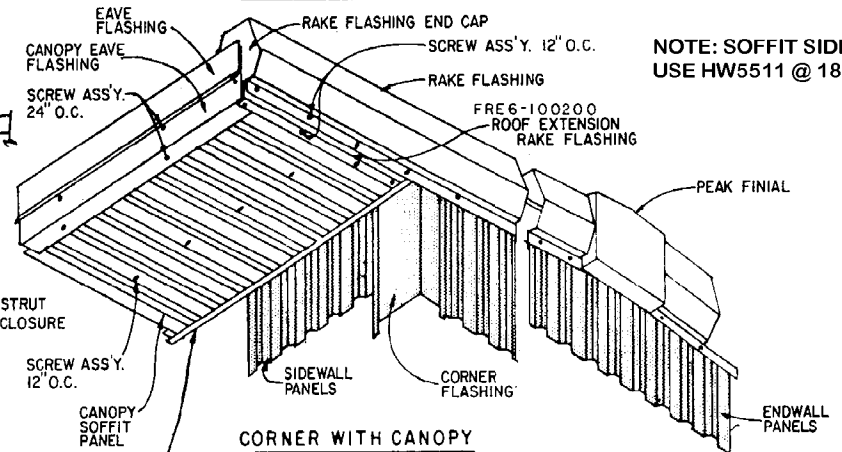


CORNER WITH CANOPY

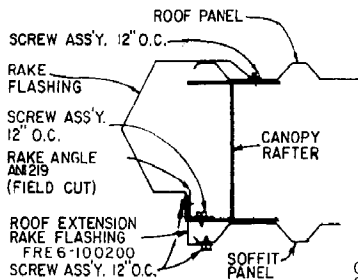

CANOPY RAKE AT INT. FRAME

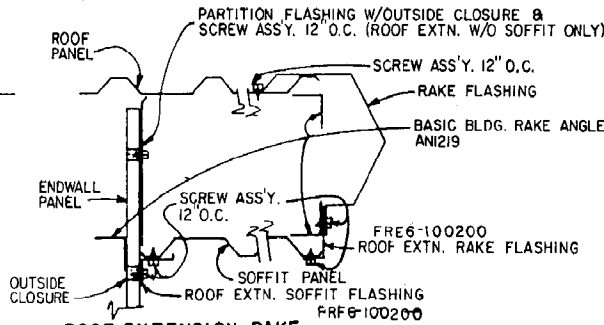

ROOF EXTENSION RAKE

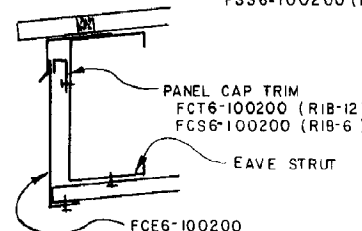

ROOF EXTENSION AT EAVE

**Straight Beam Canopy/
Roof Extension
Sheeting & Flashing Details**